



INSTALLATION MANUAL


AUTO-FULL[®]

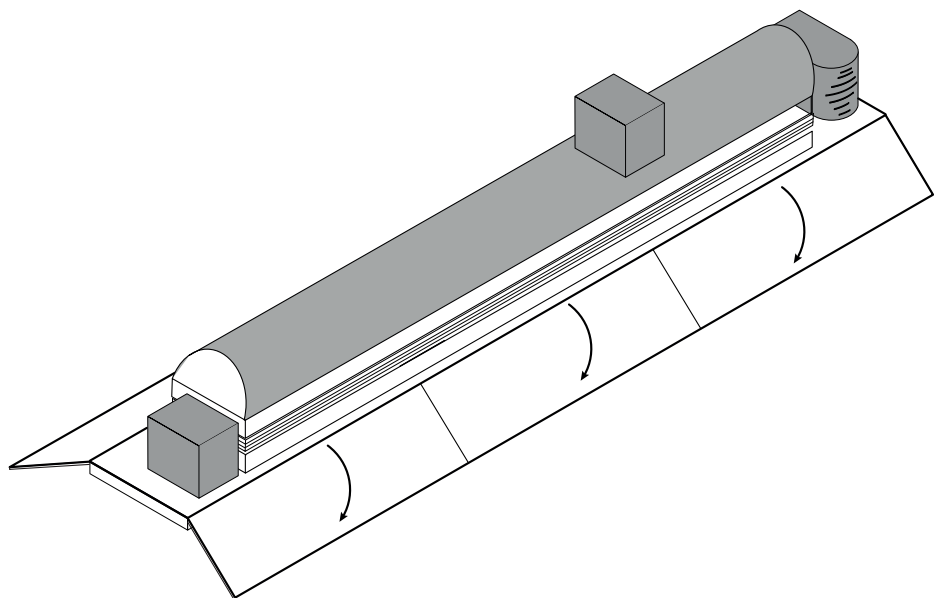


X 1

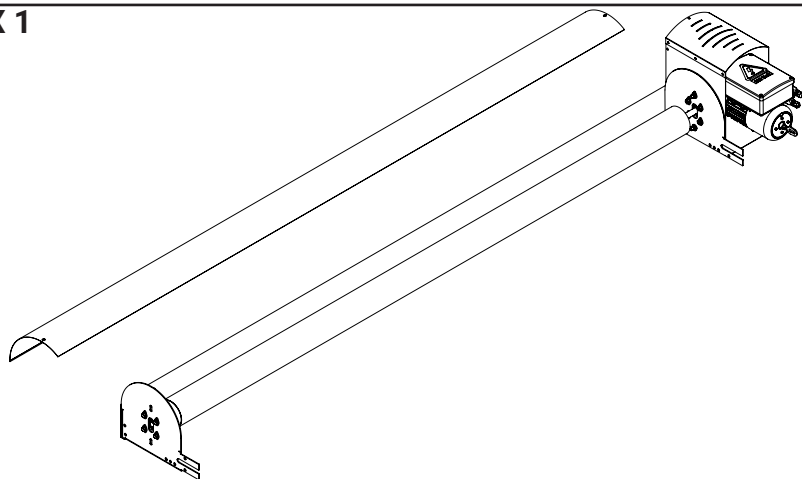


X 2

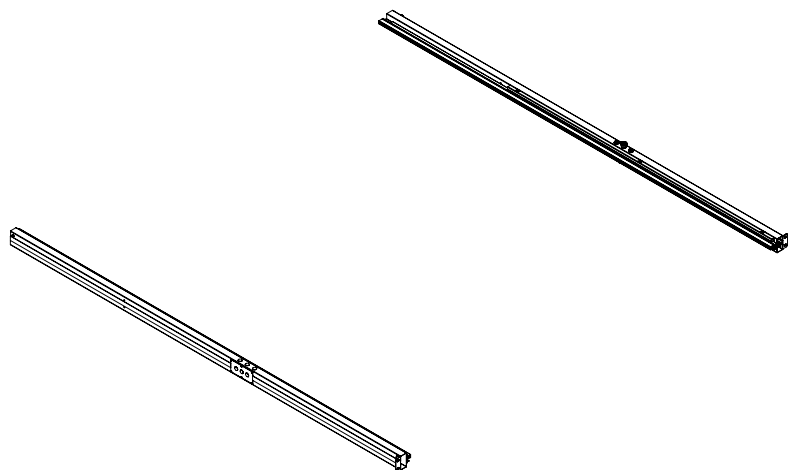


X 4

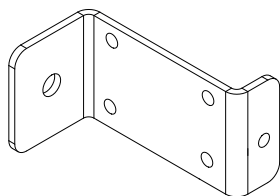


X 20

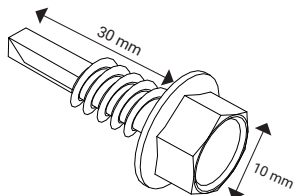


X 4

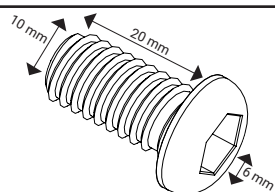

X 5

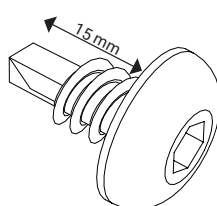

1

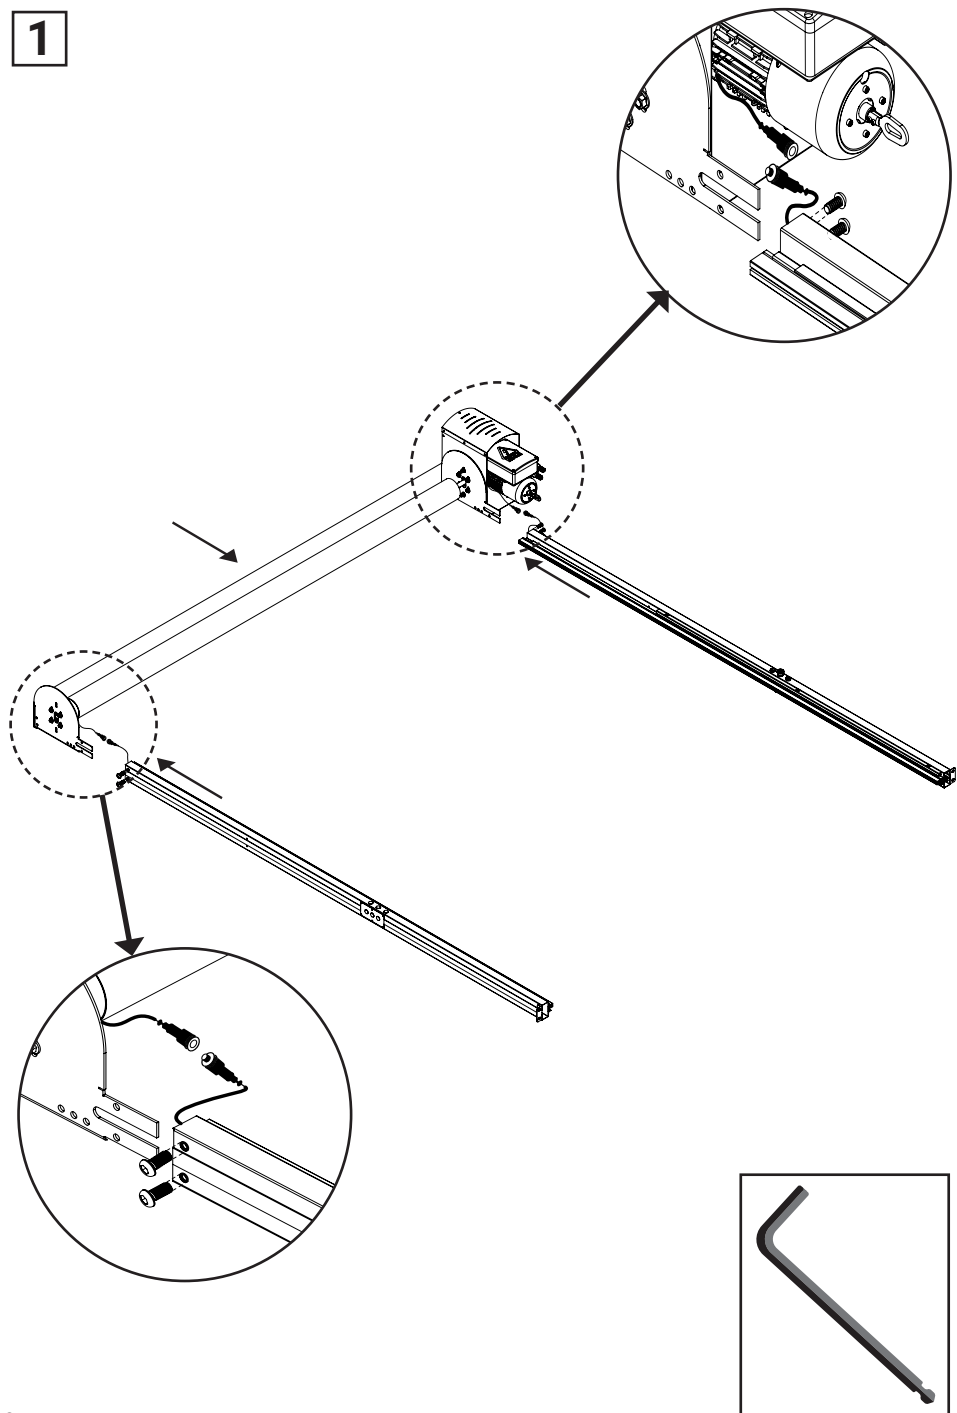


2


2.1

2.2


2.3

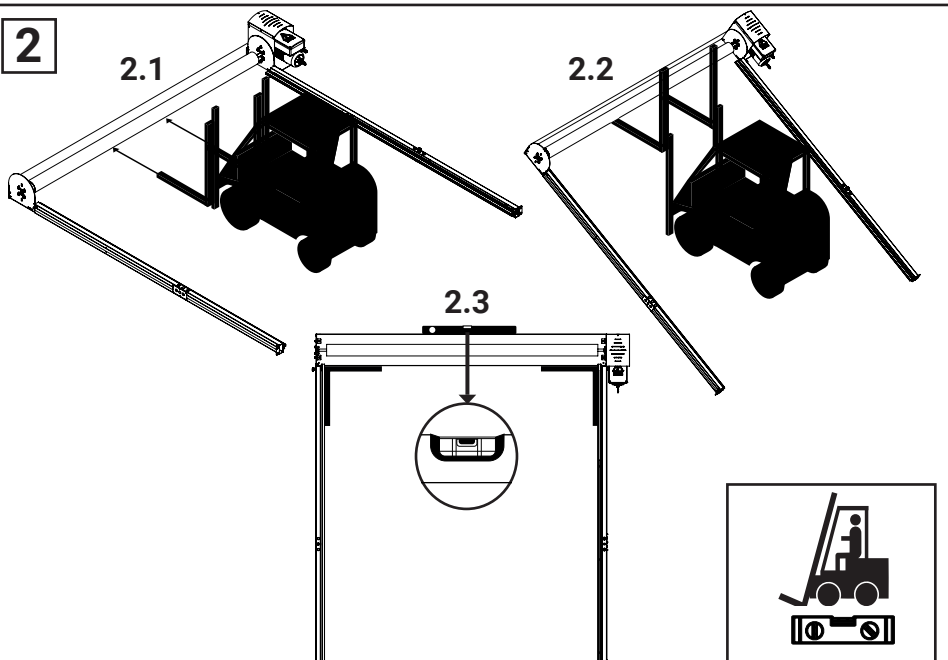

3



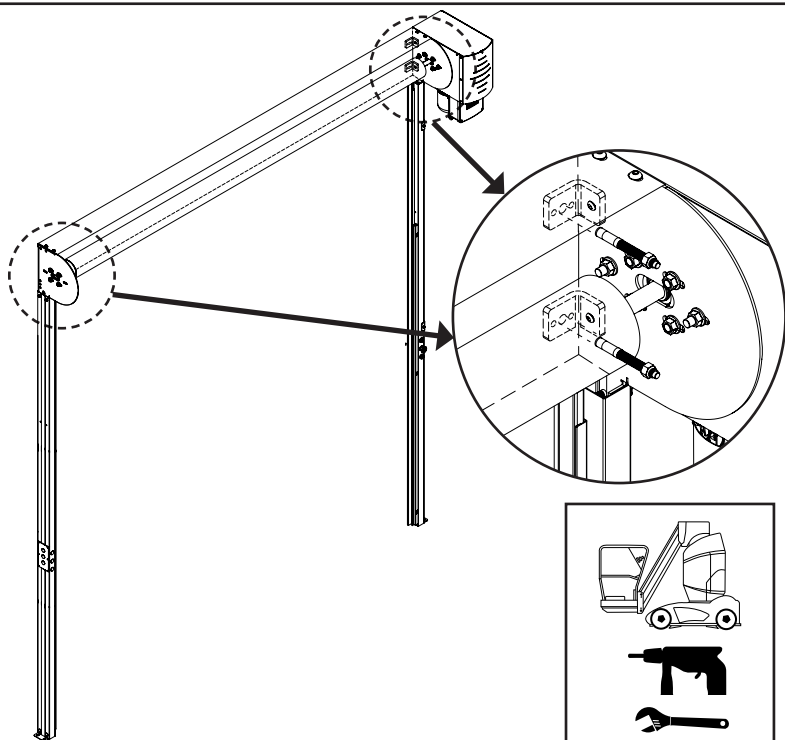


4


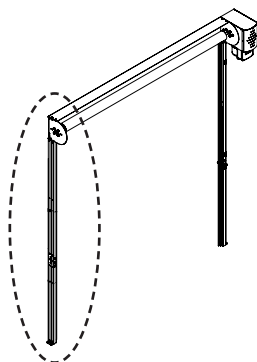


4.1


4.2

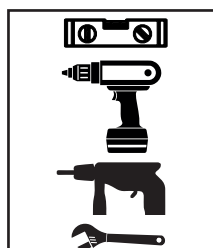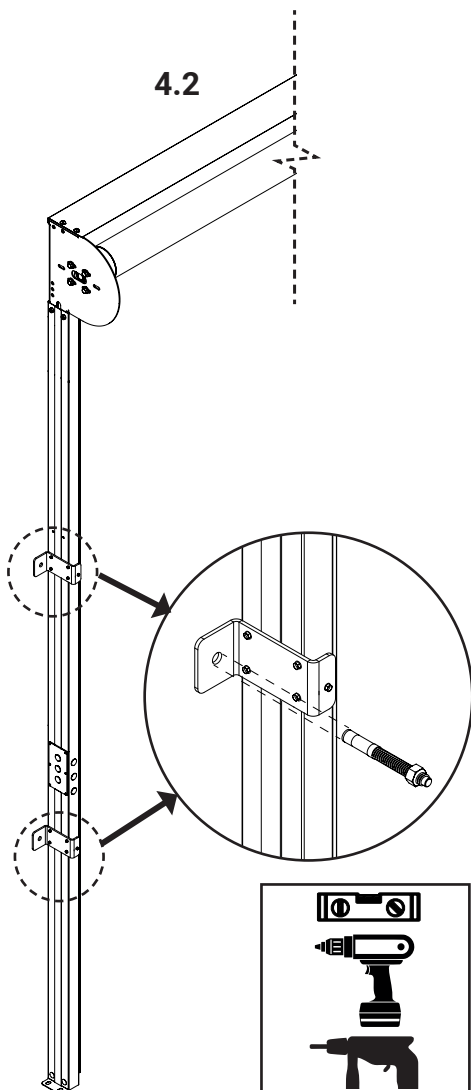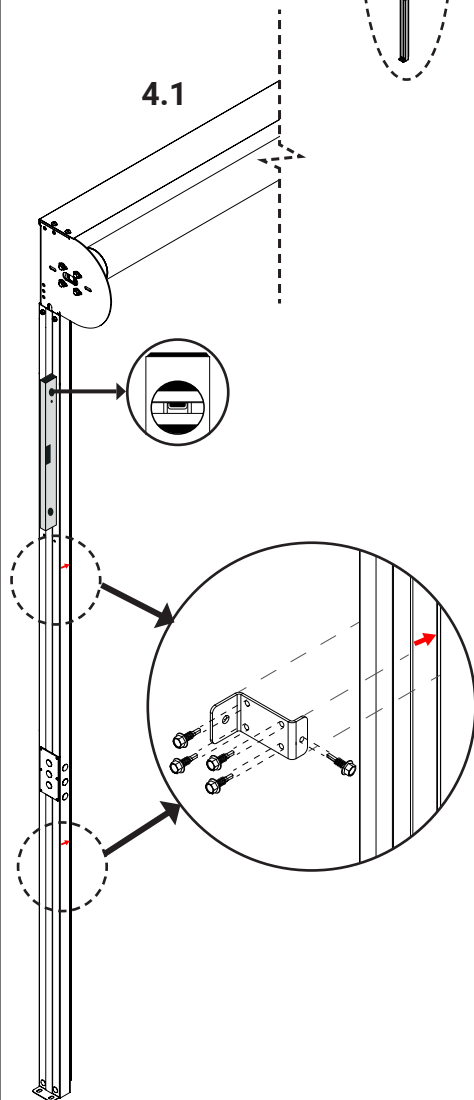

5

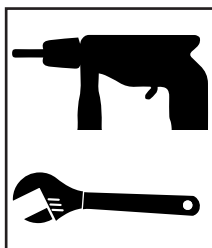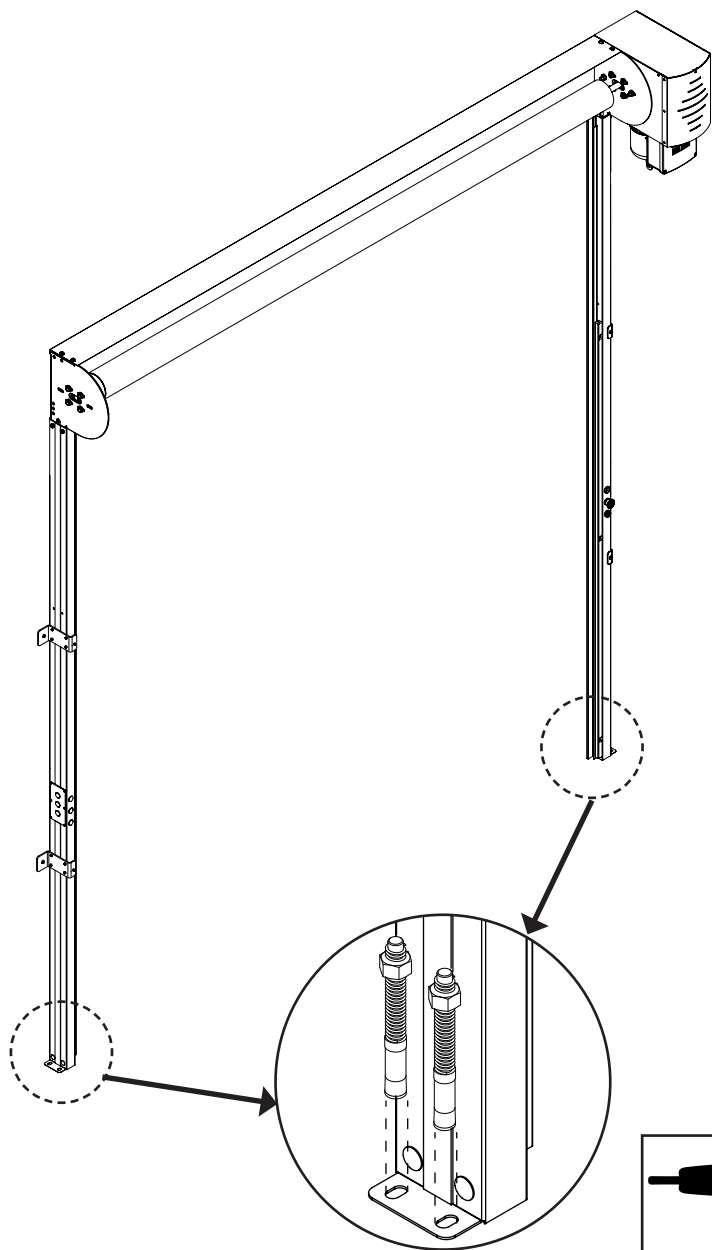

6

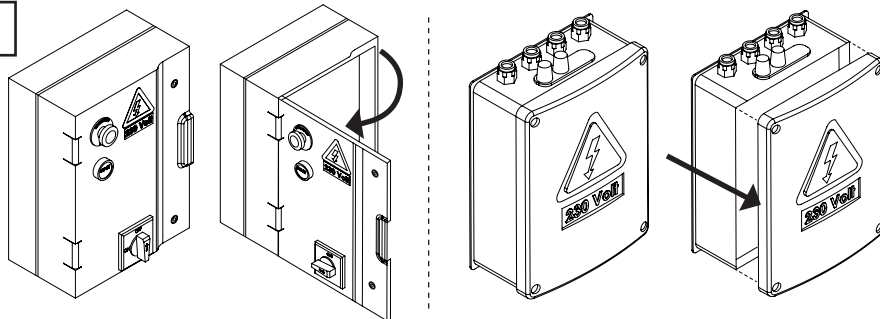

<ok> P1



P2



P3



① P1 → Enter


② P2 →

③ P1 → Enter



④ r03 + P1 → Open




⑤ r04 + P1 → Close

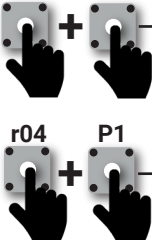





P2 + Exit

⑥

 

P3

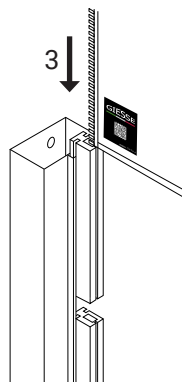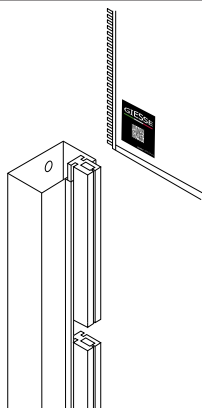

7

 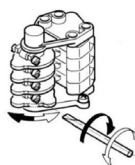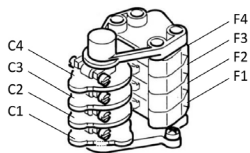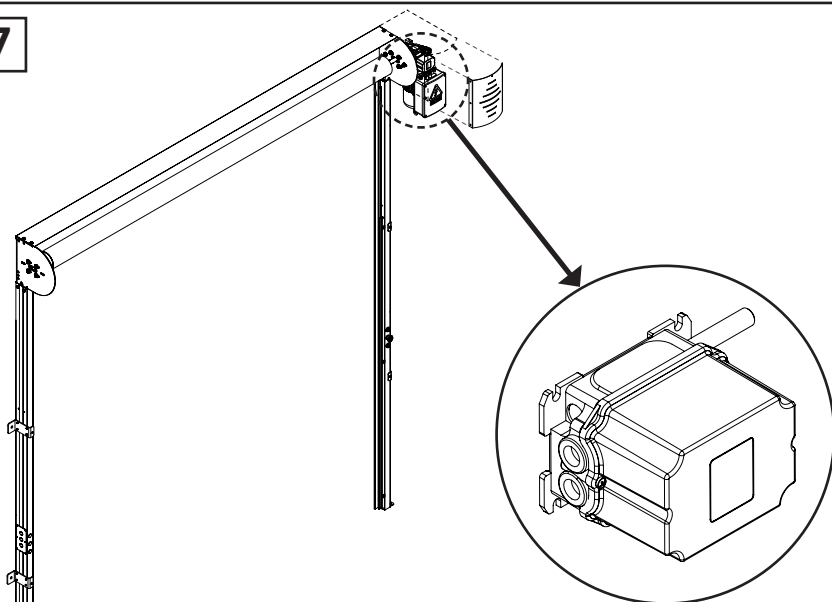

CAM	ELECTRIC WIRE	WIRE COLOR	FUNCTION
C1	F1 n.c.	White	Opening
C2	F2 n.c.	Brown	Slowdown during opening
C3	F3 n.c.	Grey	Closing
C4	F4 n.c.	Green	Slowdown during closing
/	/	Yellow	Common wire

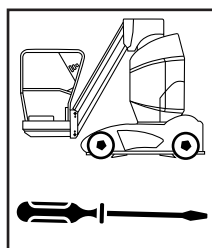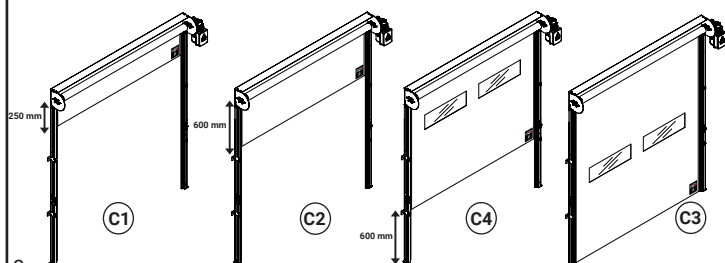

8

